


## CASTER WHEEL REPLACEMENT

### Tools Needed:

- A small flathead screwdriver or tweezers
- 6 mm hex wrench

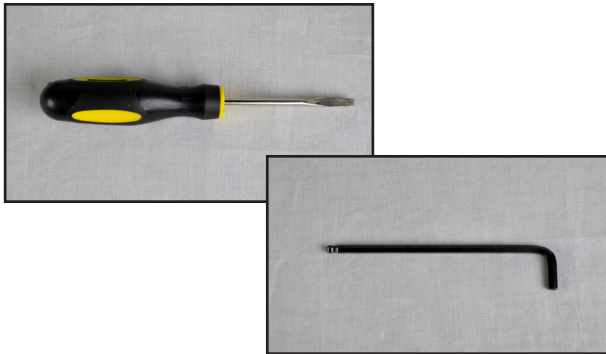

**Step 2:** Use the 6 mm hex wrench to unscrew and remove the bolt and nut.




**Step 4:** Install the replacement caster wheel with the 6 mm hex bolt and nut.



**The End:** Congratulations, you have successfully replaced the caster wheel!

**Step 1:** Use tweezers or a small flathead screwdriver to pry open the caster wheel cap on both sides of the caster fork.

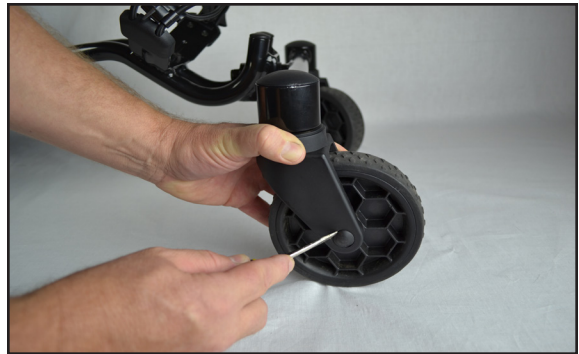

**Step 3:** Remove the old caster wheel.



**Step 5:** Adjust the torque for normal rotation. The wheel should achieve roughly 5 rotations on a single spin. Replace caster wheel caps.

