

Caster Wheel Replacement



Setup - Tools



A small flathead screwdriver or tweezers



6mm allen wrench



Removal

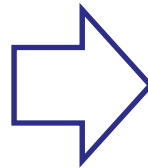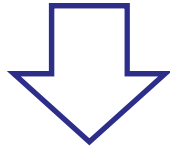

- Use tweezers or a flathead screwdriver to pry open the caster wheel cap on both sides of the caster fork.
- Use the allen wrench to unscrew the inner allen screw.

Installation



- Remove the old castor wheel. Install the replacement castor wheel with the allen screw.
- Adjust the allen screw's tightness for normal rotation. The wheel should achieve five rotations on a single spin. Check for any abnormal sounds.