

Using Marching Mode

You can activate marching mode in two ways:

- Using Handset
- Using hand gesture

1. Marching Mode Using Handset

- To activate Marching mode, hold down the RIGHT directional button, listen for the beep, then take a step back.
- Once you start walking, the cart will move in front of you.
- To deactivate, hit the STOP button. Unit will beep.



<https://youtube.com/shorts/OoYPbkkgLNE?feature=share>

2. Marching Mode Using Hand Gesture

- To activate Marching mode, hold two fingers (see picture) approx. 8-10 inches from camera, listen for the single beep, then take a step back.
- Once you start walking, the cart will move in front of you.
- To deactivate, stop, then take a step back. Unit will double beep.
- Always use UNGLOVED hand.



<https://youtu.be/ZVeAFlvhWts>

1. Steering the cart in Marching Mode

Scan the QR codes below to watch videos on operating the CaddyTrek in Marching Mode.



<https://youtu.be/ea1G-qfPW7Y>

2. Going Up Hills in Marching Mode



<https://youtube.com/shorts/gCzur56quXc?feature=share>

3. Going Down Hills in Marching Mode



<https://youtube.com/shorts/MUNPBY-ayTA?feature=share>

4. Switching from Follow to Marching Mode



<https://youtu.be/C3-Uea29O9s>