


FRAME LOCK REPLACEMENT

Tools Needed:


- Phillips screwdriver
- 7 mm wrench
- Needle-nose pliers

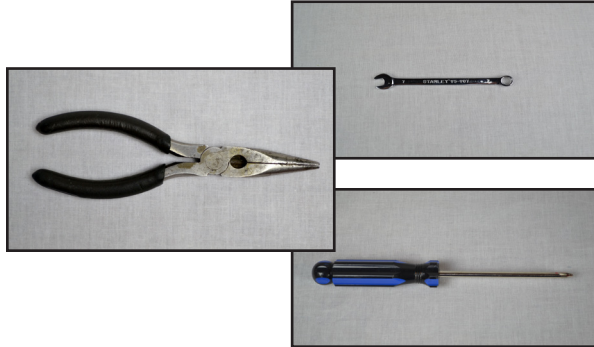

Step 1: Secure the nut from underneath the lower frame lock with the 7mm wrench, and unscrew each of the 3 screws of upper frame lock with Phillips screwdriver.



Step 2: While holding the nuts underneath with needle-nose pliers, unscrew the 3 screws from the lower frame lock and remove.

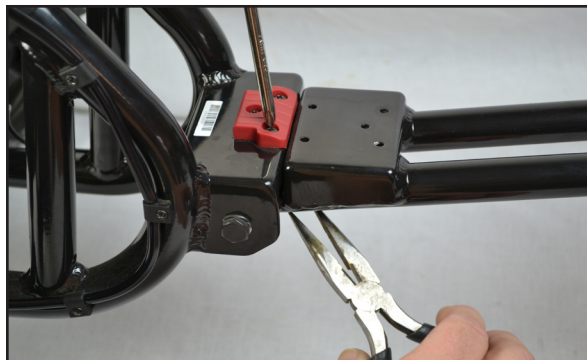

Step 3: Place screws in upper frame lock.



Step 4: Align and install the new upper frame lock.



The End: Congratulations, you have successfully replaced the frame lock!